



Language Settings

The default language of the phone is English. It supports French, German, Italian, Portuguese, Spanish, Turkish, etc. Set the language as:

Press Menu->Settings->Basic Settings->Language to enter the language list.

Configuring via Web Page

Press OK button on the keypad of the phone to enter the Status page and find the IP address of the IP phone. Enter it (for example http://192.168.3.35) into the address bar of web browser.

The default login name and password are **admin/admin**.

Note: Please locate your PC in the same network segment of the IP phone(192.168.3.X) to access the web configuration page. Please consult your network administrator or service provider for help.

Network Settings: Choose Network->Internet Port(WAN)

DHCP: By default the phone attempts to contact to a DHCP Server in your network in order to obtain its valid network settings, e.g. IP address, sub mask, gateway, DNS server, etc.

Static IP Address: If your phone cannot contact a DHCP Server for any reason, you need to enter the network settings manually via Static IP Address. Please contact your internet administrator for more details.

PPPoE: If you are using the xDSL Modem, you can connect your phone to the internet via PPPoE mode. Please contact your ISP for the **User Name** and **Password** for internet access.

Note: Using the wrong network parameters may result in inaccessibility of your phone and may also have an impact on your network performance! Please contact your network administrator!

Account Setting: Press Accounts->Account X

Register Status Icon in the LCD



the account is registered successfully.



Register failed.

Please contact your service provider for more account details.

Parameter:

- Register Status: Shows the register status of the IP phone.
- Account Active: You can choose on/off to enable/disable the account respectively.
- Label: Shown on the LCD for users to identify the account.
- Display Name: Shown as Caller ID when making a phone call.
- User Name: Provided by ISP for registration.
- Register Name: Authenticated ID for authentication, provided by ISP.
- Password: Provided by ISP for registration.
- SIP Server: Server for registration, provided by ISP.

Configuring via Keypad

Network Setting: Press Menu->Settings->Advanced Settings->Network->WAN Port /PC Port/VLAN/ Webserver Type Option to enter the internet relating configuration page.

Account Setting: Press Menu->Settings->Advanced Settings->Accounts->Enter to configure the account settings. You can refer to the above "Configuring via Web Page" for the parameter details.

The manual is only for reference, please take the object as the standard.
We reserve the right to improve or change the product and the user guide without notice.

You can download the latest user manuals from our website:
<http://www.yealink.com/en/download.asp?BigClassName=IP%20Phone>

**Enterprise IP Phone
SIP-T26P**



902 48 50 70
info@innovamer.com
Islas Canarias

 
www.innovamercomunicaciones.com




Installation

www.yealink.com


Packing List

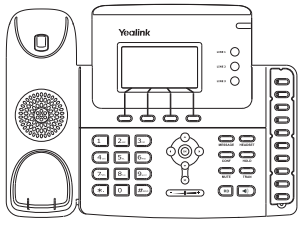


IP Phone

 


Handset

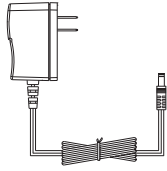 

Power Adapter

 


Ethernet Cable

 


Handset Cord



 CD Content




Stand

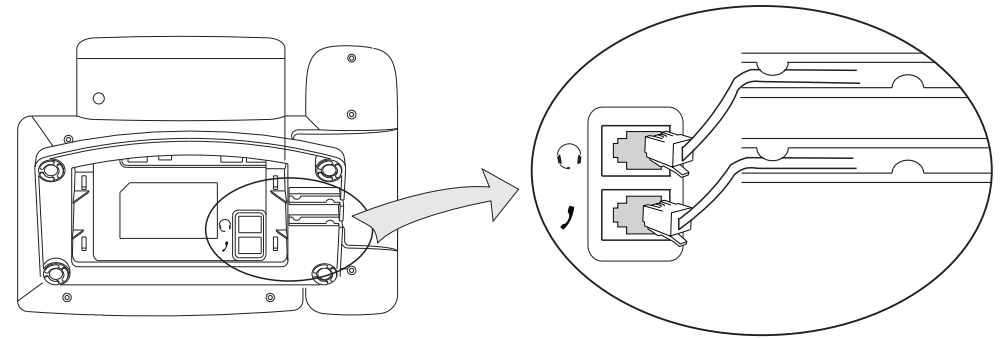 


Assembling the Phone

 1. Attach the Stand, as shown below:

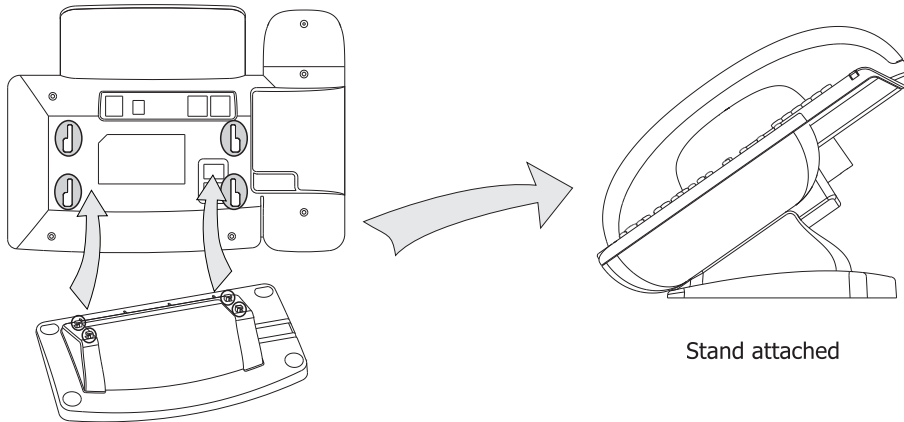


 2. Connect Handset and Headset, as shown below:

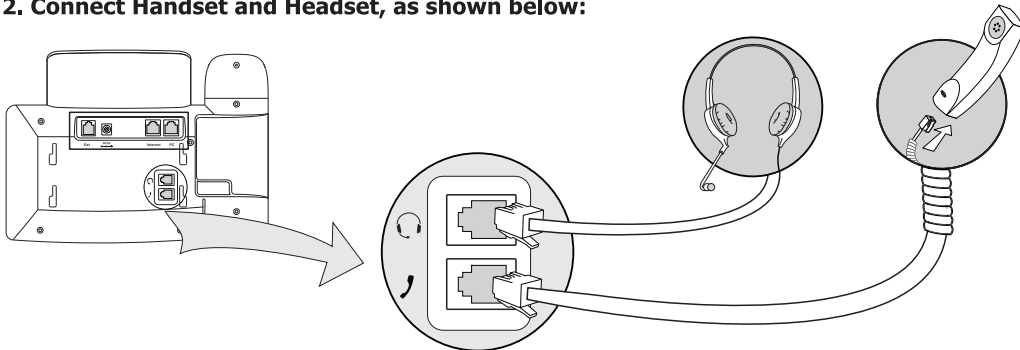

Note: Headset is not included, should be purchased separately.

 3. Connect Network and Power, as shown below:

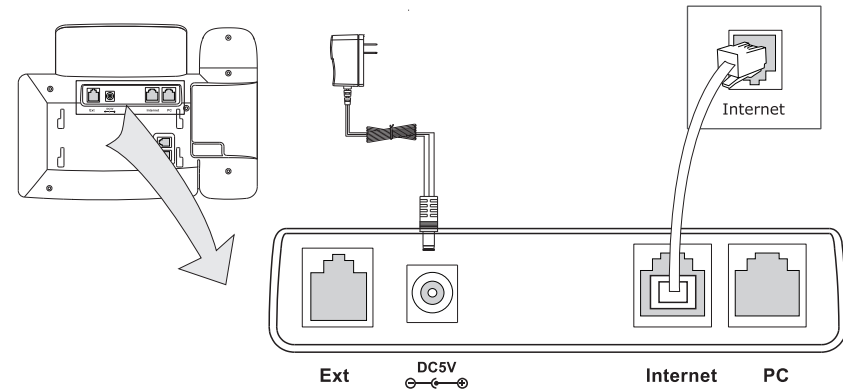

Note:

1. If inline Power (PoE) is provided, do not install the AC adapter.
2. The Internet Port can be also connected to Hub/Switch/IP PBX or other internet devices.

The phone can also share the network connection with other network devices such as PC. Connect the phone's PC Port and computer's Network Port together using an Ethernet cable, as shown below:

